


## Arc Stabilization System Setup

Content:

1. Parts
2. Assembling
3. Connecting the 5th line

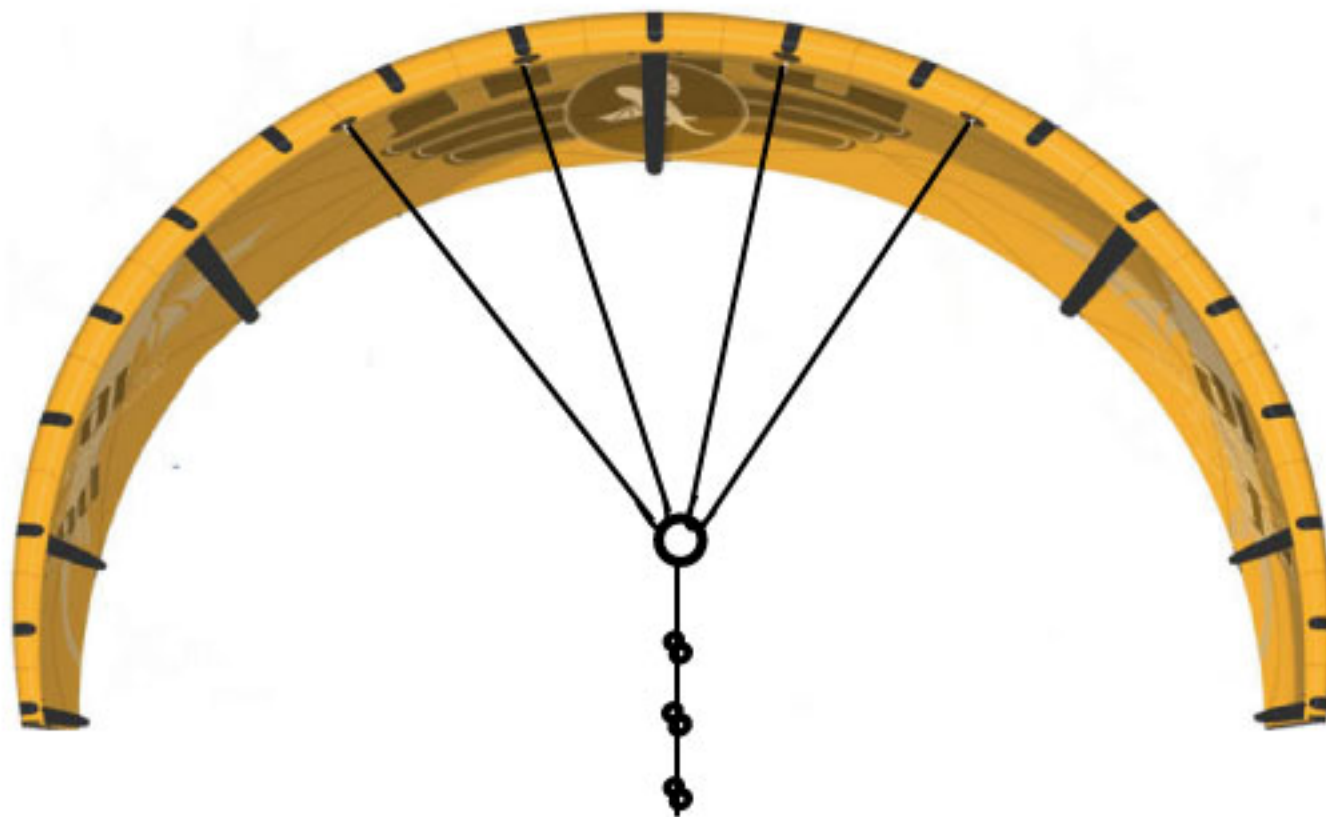

## 1. Parts

two pigtails



knot line with  
ring




two lines with loops




## 2. Assembling

Step 1: connect the two pig tails to the attachment points on the kite ( red arrows )

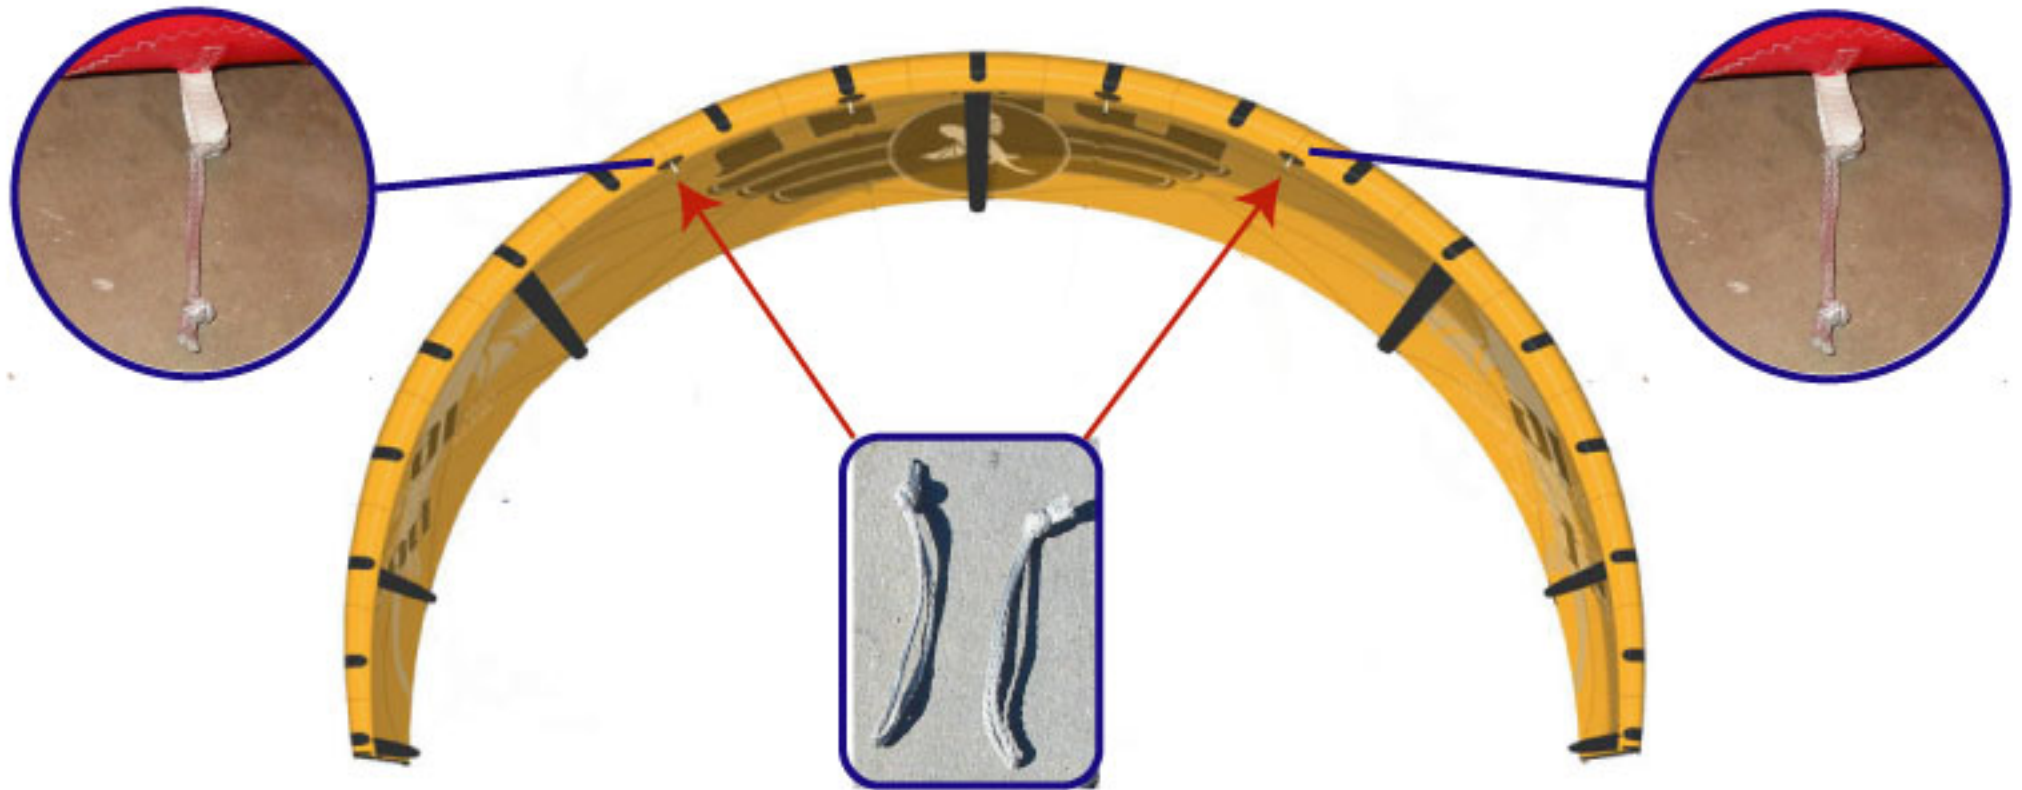


## 2. Assembling

Step 2: connect the grey lines with larks head to attachment points.

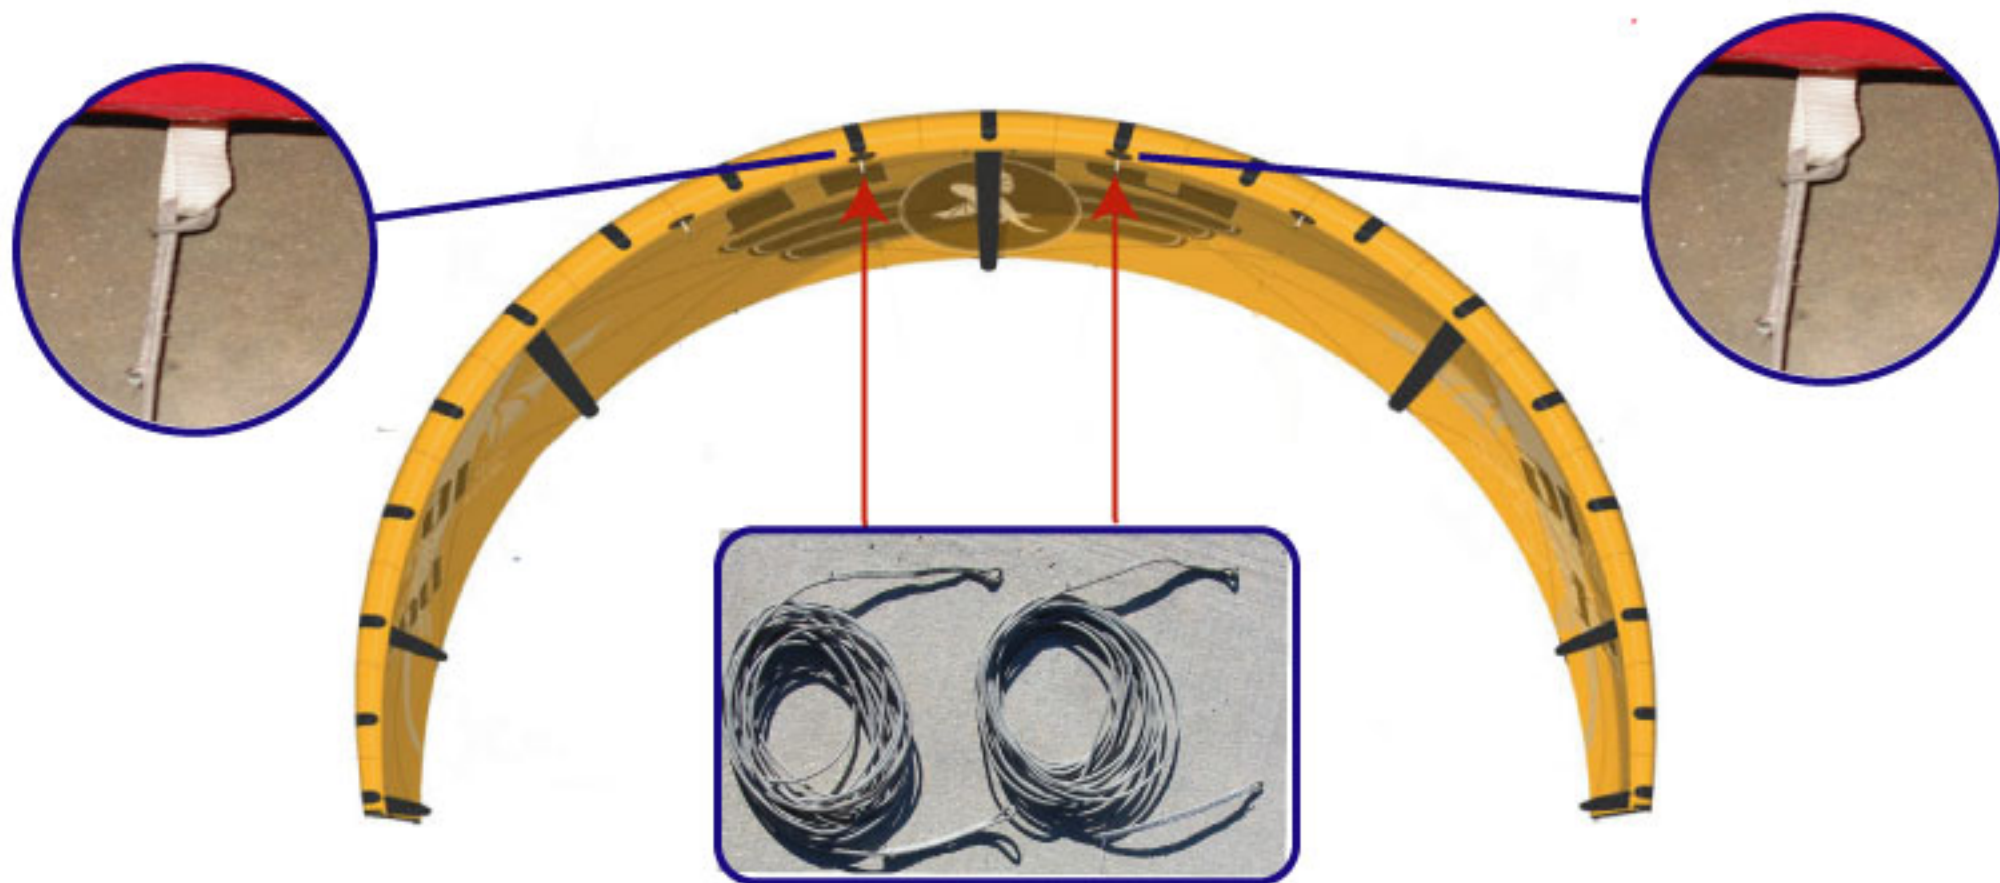

## 2. Assembling

Step 3: pull the lines through the ring ( see broken red line) and connect the ends on the pigtails.

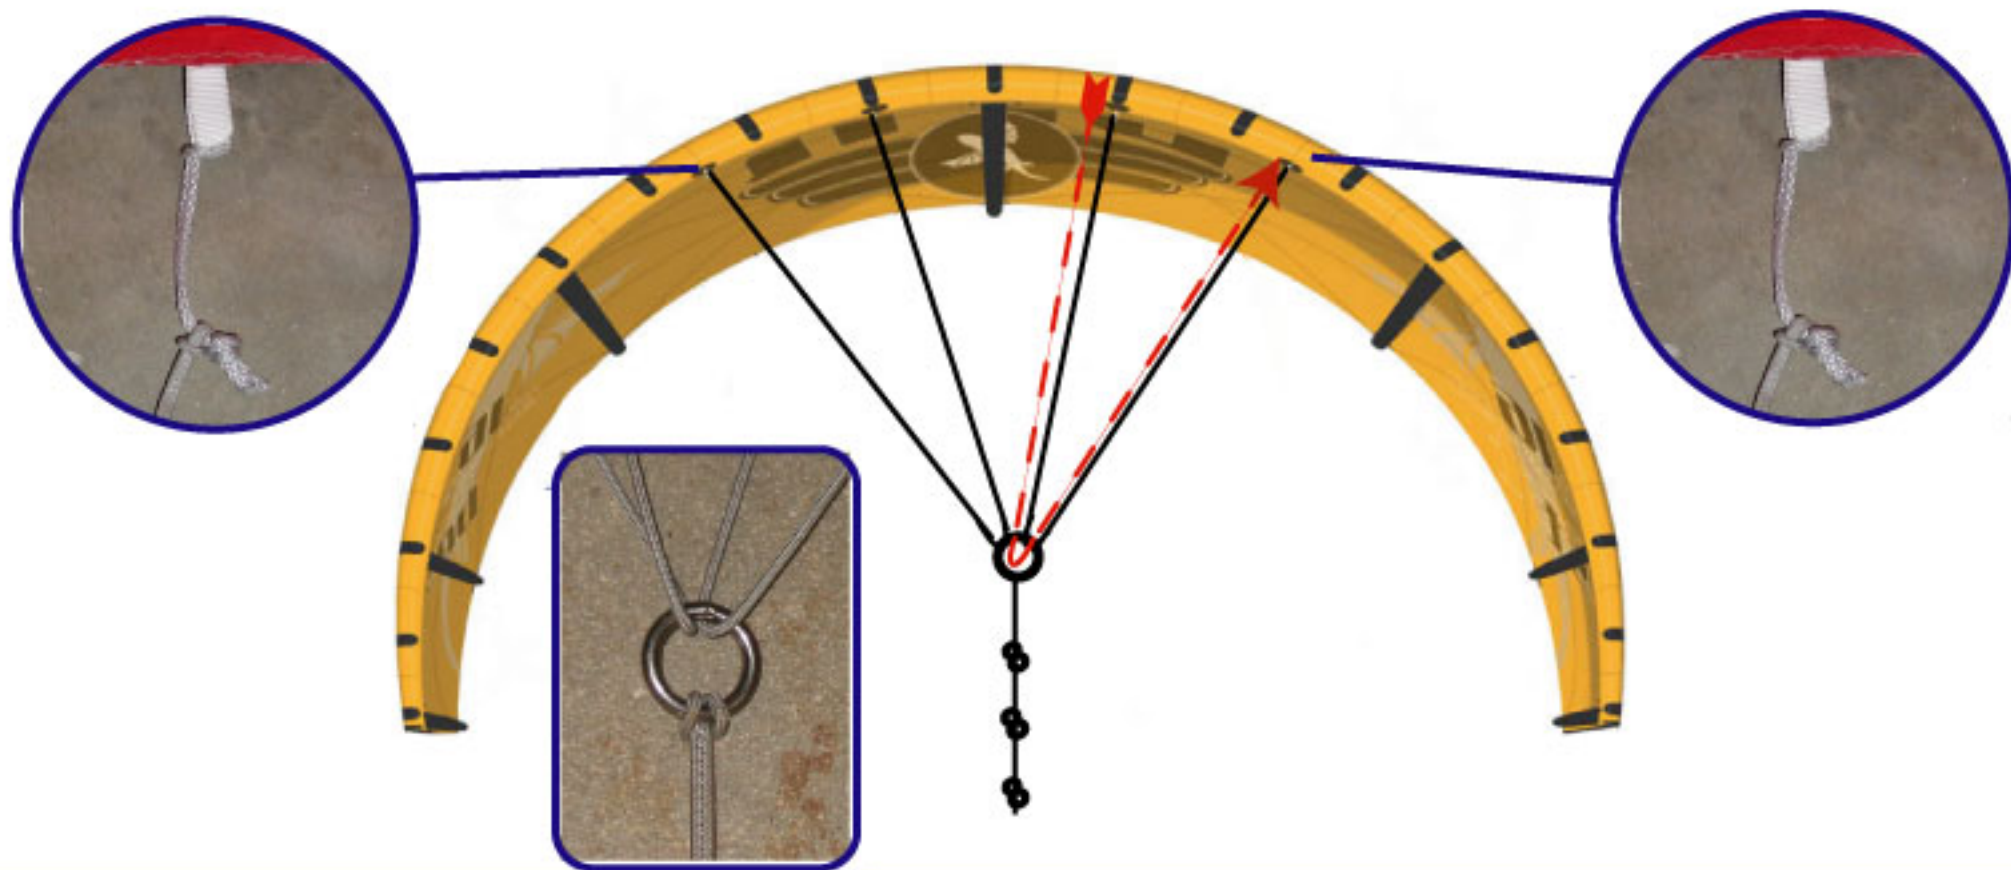

### 3.Connecting the 5th Line

Step 1: Imagine a line between the wing tips ( red broken line).

Step 2: Connect the 5th line at one of the knots under this line. Use a larks head.

Tip: If you feel the kite does not have enough power, the tension on the 5th line might be too high. Connect the 5th line further away from the leading edge (green arrow). If you see that the 5th line got too much slack, connect the 5th line closer to the leading edge (blue arrow).

